
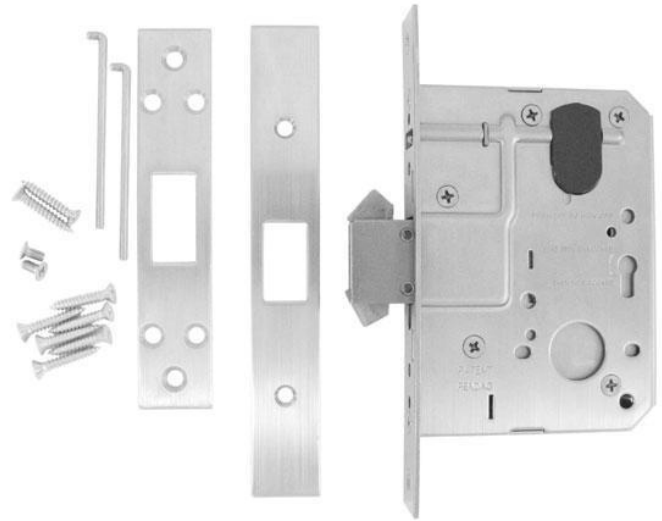


Installation Guide

ML-5000

ML-6000

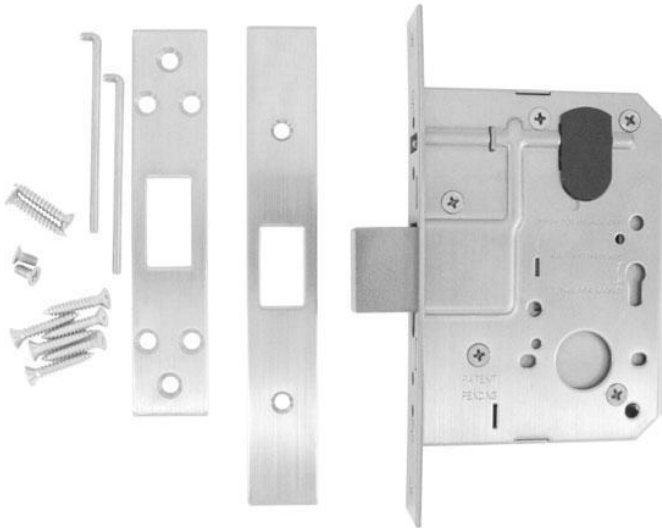

N



Function Deadbolt and Sliding
ML-CAM-N

M1



Adaptor M1 -Function Locking Turn Adaptor
ML-ADP-M1

Pack Contents

1x Lock Assembly
1x Strike Plate
1x Face Plate
1x Strike Box
2x Face Plate Screws
2x Fixing Screws
2x Cylinder Retaining Pin
6x Strike Screws

Product Features

Heavy Duty Range
Stainless Steel Construction
2 Year Guarantee

dD Guarantee

Designer Doorware Pty Ltd guarantees their products against defects in workmanship or materials. If, within the warranty period your product is found to be defective, Designer Doorware will repair and or supply the same or an equivalent product free of charge.

Designer Doorware Pty Ltd however, assumes no liability for the following:

- Improper installation or failure to follow the fitting instructions.
- Failure due to improper maintenance or fair wear and tear.
- Indirect or consequential loss or damage.
- Cost of removal and/or replacement and
- Cost of freight and/or travelling time.

All finishes unless PVD are classified as soft finishes as deterioration is possible under some climatic conditions, these are excluded from this guarantee. Any modifications to a product as supplied or repairs are excluded from this guarantee.

dD Product Care

Finishing Care

All Designer Doorware products are made with superior quality materials and finishes to meet strict standards. However, it is necessary that the products be cared for during and after installation to aid in their longevity.

Caring for Door Handles during Installation

The cleaning of new door handles should prevent special problems, although more attention may be required if the installation period has been prolonged. Where surface contamination is suspected, immediate attention to cleaning will promote a trouble-free service life. It's important to know that these products need constant maintenance, or they will appear to oxidize.

Product Design

In the interest of constantly enhancing products, we reserve the right to alter our dimensions, materials and designs, any time without notice.

Contact Us

t + 61 3 9300 8888
sales@designerdoorware.com
designerdoorware.com

Australian Head Office:
7 Kimpton Way, Altona, 3018 VIC

Melbourne Showroom:
431 Church St, Richmond, 3121

Sydney Showroom:
Shop 2, 35 Buckingham St,
Surrey Hills, 2010 NSW

Beverly Hills Showroom:
285 South Robertson Blvd,
Beverly Hills California, 90211 USA

LEFT HAND



RIGHT HAND




SLIDING DOOR



Handing of Door

NOTE: Case does not need to be opened at any time to change function / handing.


1.

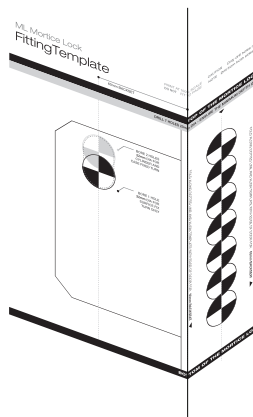

Mortice Instruction

1. Determine centre line and height of installation on door.
2. Place template on door and align with centre line, mark an mortice area to desired depth
3. Fold template, align on door to centre lines, mark and drill, desired cylinder, spindle and screw holes from both sides.

2.

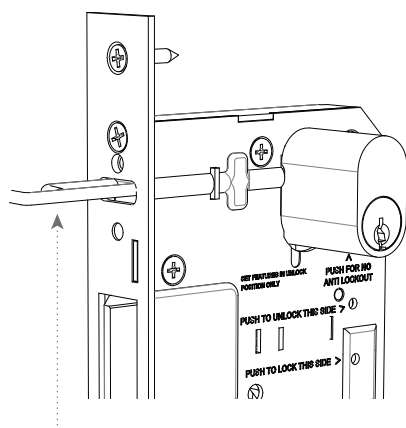

Installation of Cylinders and Adaptor (if required)


1. Remove plastic cylinder cap with small flat blade screwdriver.
2. Install lock in door and insert cylinder.
3. Insert retaining pin to secure cylinder or adaptor - ensure pin is flush with plate.
4. Install face plate with (2) metal thread screws provided.

3.

Retaining Pins

Striker Installation

- 1: Mark out frame for striker and striker box.
2. Cut out recess in door frame for flush installation.
3. Install striker with screws provided.

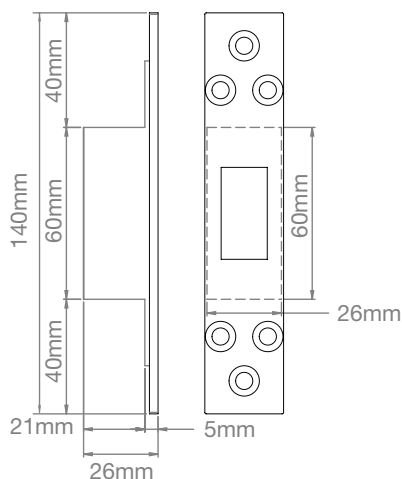

4.

ML-5000/ML-6000 Mortice Lock

Fitting Template



PRINT AT 100% SCALE
DO NOT FIT TO PAGE


CAUTION Only drill holes required for your lock function
NOTE Drill from both sides of the door to prevent damage

60mm BACKSET

60mm BACKSET

TOP OF THE MORTICE LOCK


DRILL 7 HOLES 20mm DIA - ENSURE THE MINIMUM DEPTH IS 90mm FOR 60mm BACKSET

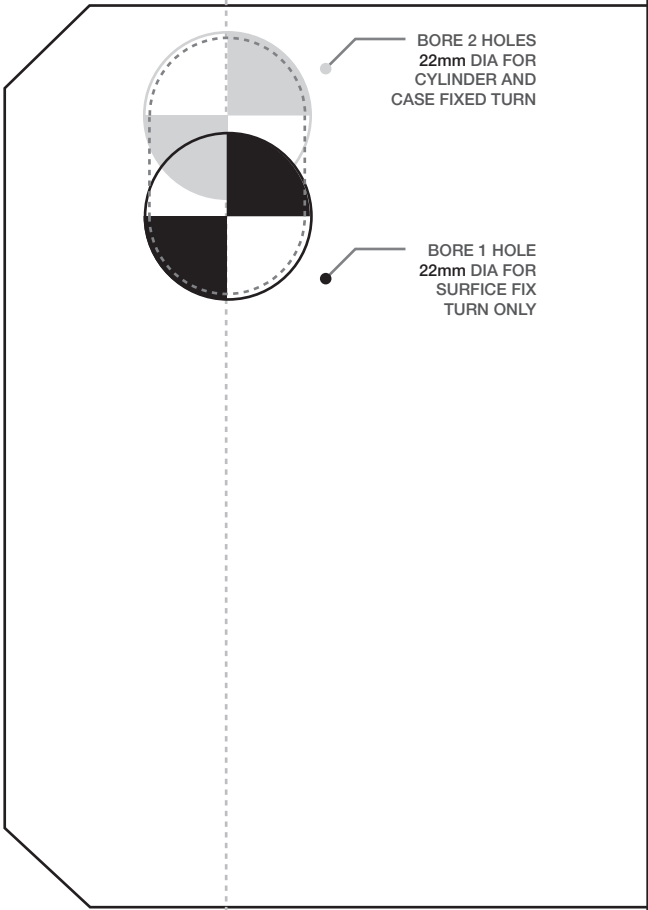

FOLD ALONG DOTTED LINE AND ALIGN TEMPLATE WITH EDGE OF DOOR FOR 60mm BACKSET ▼



FOLD ALONG DOTTED LINE AND ALIGN TEMPLATE WITH EDGE OF DOOR FOR 60mm BACKSET ▼

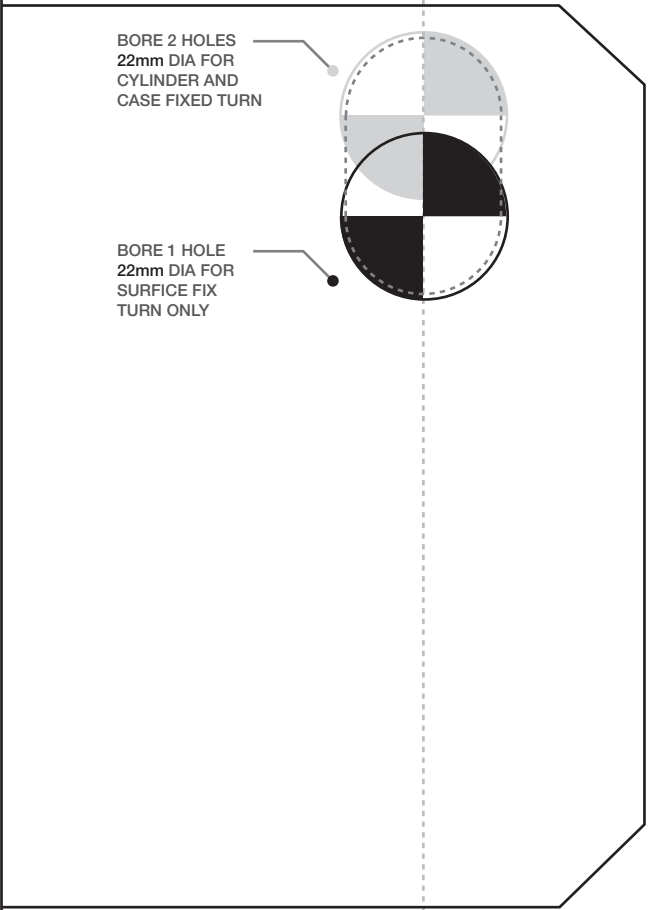

BOTTOM OF THE MORTICE LOCK